


L.D.  
5655  
R761  
M117  
26.489  
C.2

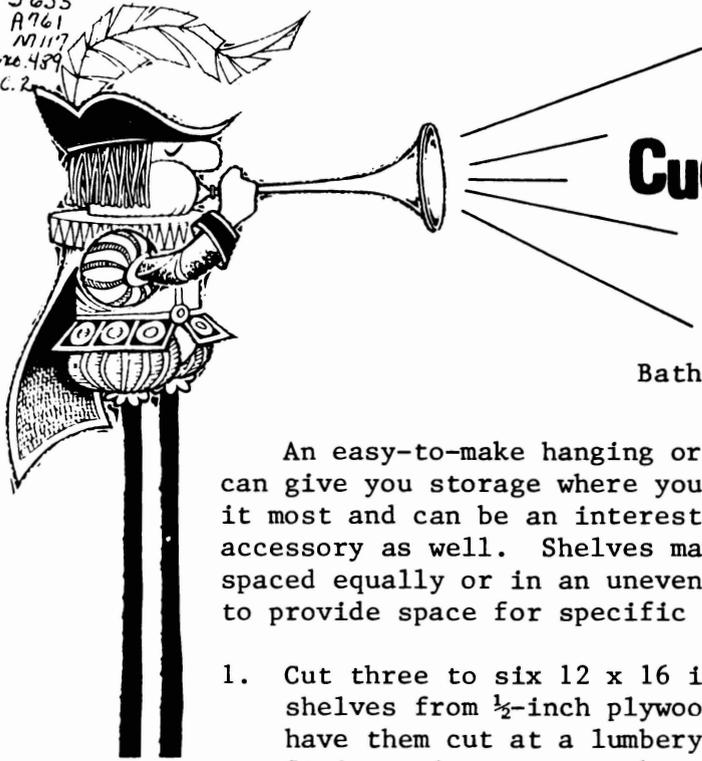

# Cue Sheet

## Bathroom Organizer

An easy-to-make hanging organizer can give you storage where you need it most and can be an interesting accessory as well. Shelves may be spaced equally or in an uneven pattern to provide space for specific items.

1. Cut three to six 12 x 16 inch shelves from 1/2-inch plywood or have them cut at a lumberyard. Stain, paint or wrap the shelves with fabric.
2. Cut two pieces of sturdy fabric 13 inches wide by 12 feet long. Or if you prefer to seam two 6-foot strips from two yards of 54-inch fabric.

For more body and strength, press on an iron-on interfacing strip before stitching, or slip a fusible web layer in to bond the two layers together after strip is stitched and turned. Stitch the three sides with a 1/2-inch seam allowance. Trim corners and press the seams open. Turn and top press. Turn the ends in and close with stitching or fusing.

3. Fold the strip in half and double stitch a 1 3/4-inch casing.

Extension Specialist

Publication No. MK-489  
June 1979


JOY ITEM



V.P.I. & S.U. LIBRARY

AUG 7 1979

BLACKSBURG, VIRGINIA

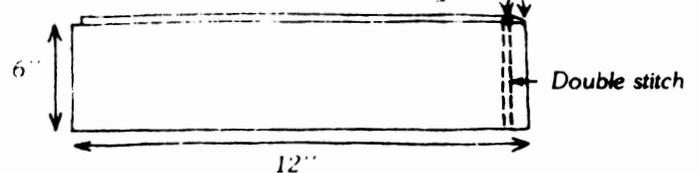


*The Virginia Cooperative Extension Service by law and purpose is dedicated to serve all people on an equal and nondiscriminatory basis.*

*An Equal Opportunity/Affirmative Action Employer*

*Issued in furtherance of Cooperative Extension work, Acts of May 8 and June 30, 1914 and September 30, 1977, in cooperation with the U.S. Department of Agriculture. W.R. Van Dresser, Dean Extension Division, Cooperative Extension Service, Virginia Polytechnic Institute and State University, Blacksburg, Virginia 24061; M.C. Harding, Sr., Administrator, 1890 Extension Program, Virginia State College, Petersburg, Virginia 23803.*



- 4. Measure 18 inches from the casing stitching and lightly mark a line on each fabric strip (on the inside). Determine the placement of the remaining shelves. Using plain or fancy upholsterer's tacks, tack into the edge of the shelves at about 1 or 2 inch intervals. For bottom shelf, turn the fabric back 3/4 inch over a strip of upholsterer's tape and back through tape and fabric to make a strong smooth finished edge.

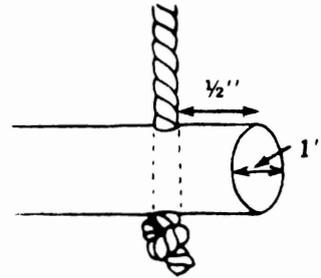

- 5. Drill 5/16-inch holes through a 15-inch length of 1-inch wood dowel 1/2-inch from the ends of the dowel. Thread a length of nylon rope through the holes and knot the ends to secure them. (The length of the rope determines how far the unit hangs from the ceiling.)
- 6. Hang your finished unit. Add bath accessories, towels, plants, or magazines.

DECISIONS:

Check out your color plan - for towels also accent colors -

---



---

What do you want to store on the organizer -

---



---

List supplies and equipment needed -

---



---

Amount fabric - Cost

---



---